

# Volta

## Teamwork Workstation

**MW-DT-N-494-498**



Installation instruction


Web: [www.mwworkstation.com](http://www.mwworkstation.com)

Tel: +86 13695211636

Mail: [robbor@mwworkstation.com](mailto:robbor@mwworkstation.com)

# Teamwork Workstation

PRODUCT

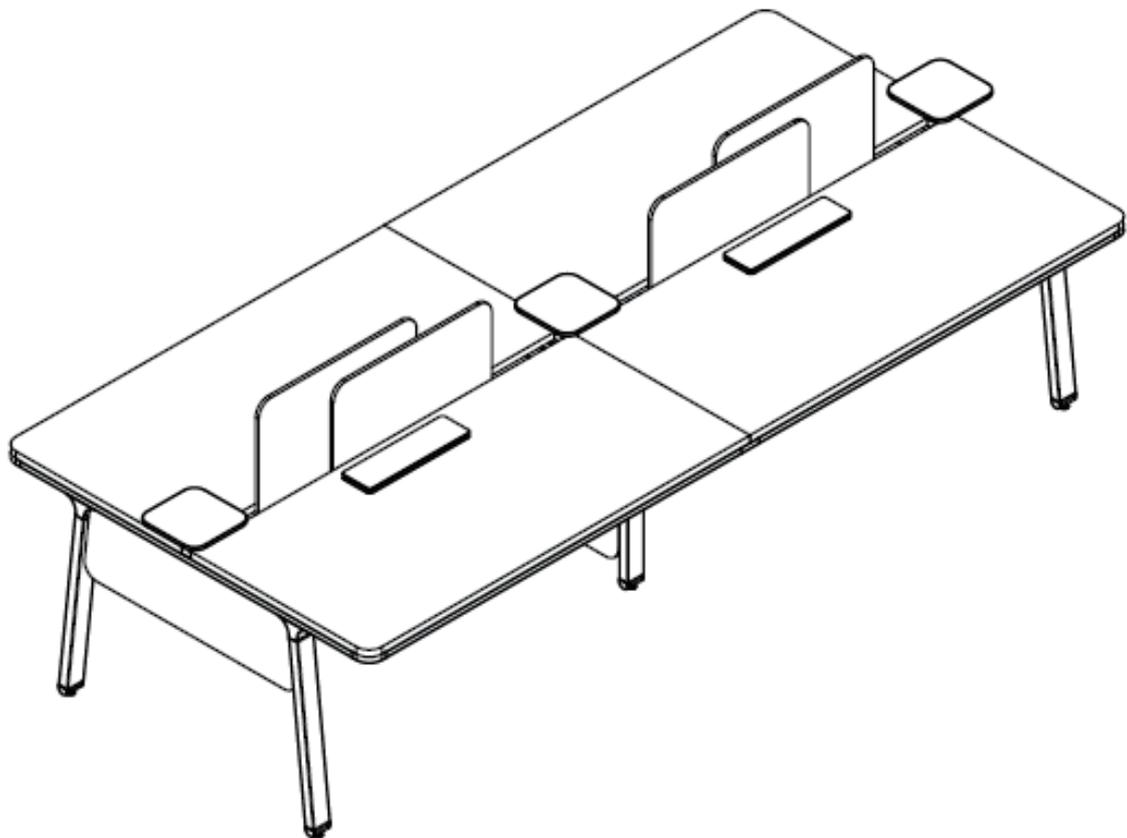


M & W

# Teamwork Workstation


## PARTS SHOW

A

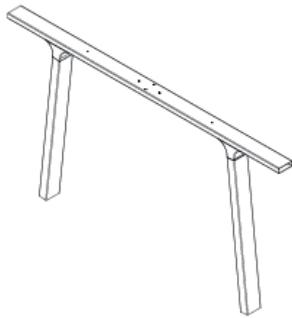


End steel feet

B

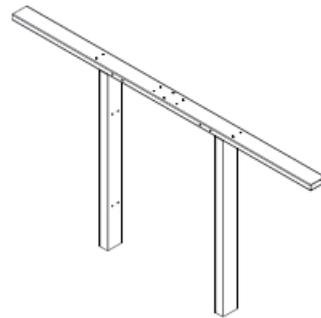

Middle steel feet

C

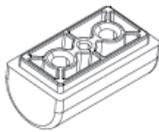


Steel foot plugs



Universal  
adjustment feet

D

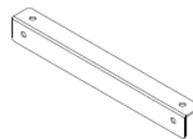

End magnetic  
cover plate



Middle hanging  
cover plate

E



End hanging  
plate



Middle hanging  
plate

F



Middle beam


# PARTS SHOW

G




End beam

H

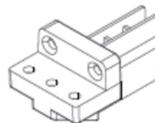

Intermediate beam joint

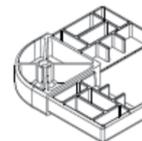


Two-way joint

I




Three-way joint

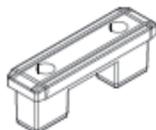


Slider

J

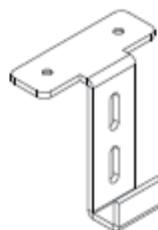

Screen boom

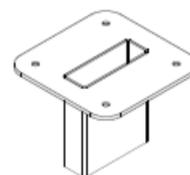


Column tray

K



Pallet bamboo board

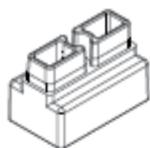

Post joint

L



Cloth screen



Bamboo screen (cork board)

M



Volta junction box



Self-tapping screw 4\*35

N




Anti-slip cylindrical head hexagon screw with pad M6\*16



Self-tapping screw 4\*16

# PARTS SHOW

O

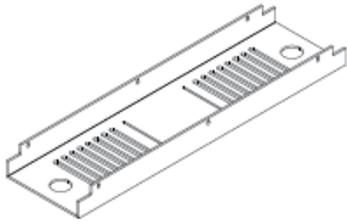

Trunking

P



Set screw



Hexagon socket  
head screw  
M8\*16

Q



Self-tapping  
screws 4\*10



Cross head with  
insert 4\*16


R




Flat head screw  
6\*10

# INSTALLATION STEPS

1

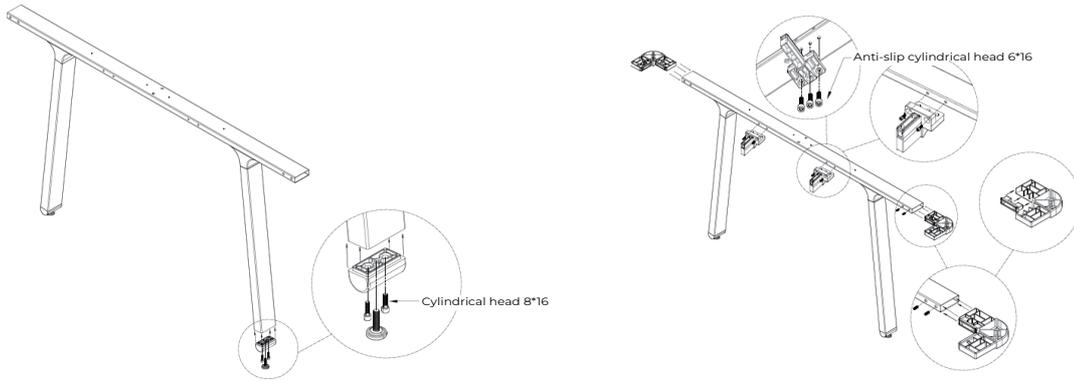

2

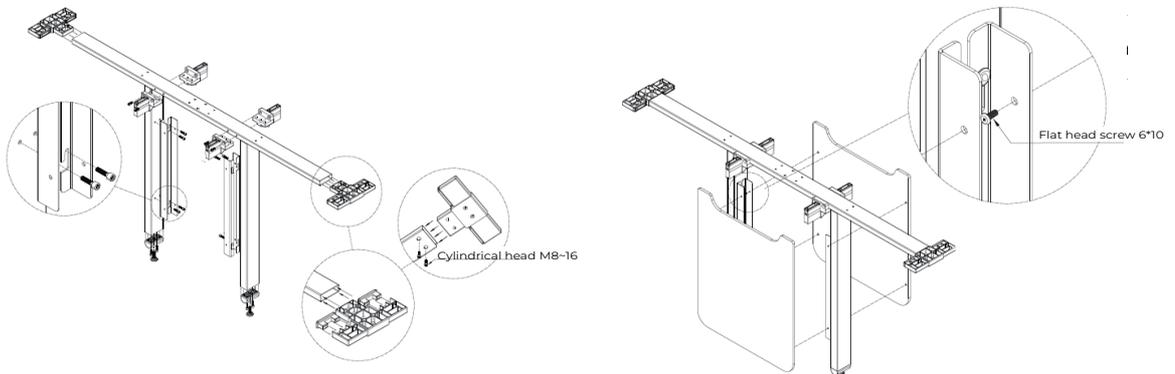

3

