

T10

Partition



Installation instruction

Web: www.mwworkstation.com


Tel: +86 13695211636

Mail: robbor@mwworkstation.com

INSTALLATION STEPS


1

Remove the single-sided decorative panel

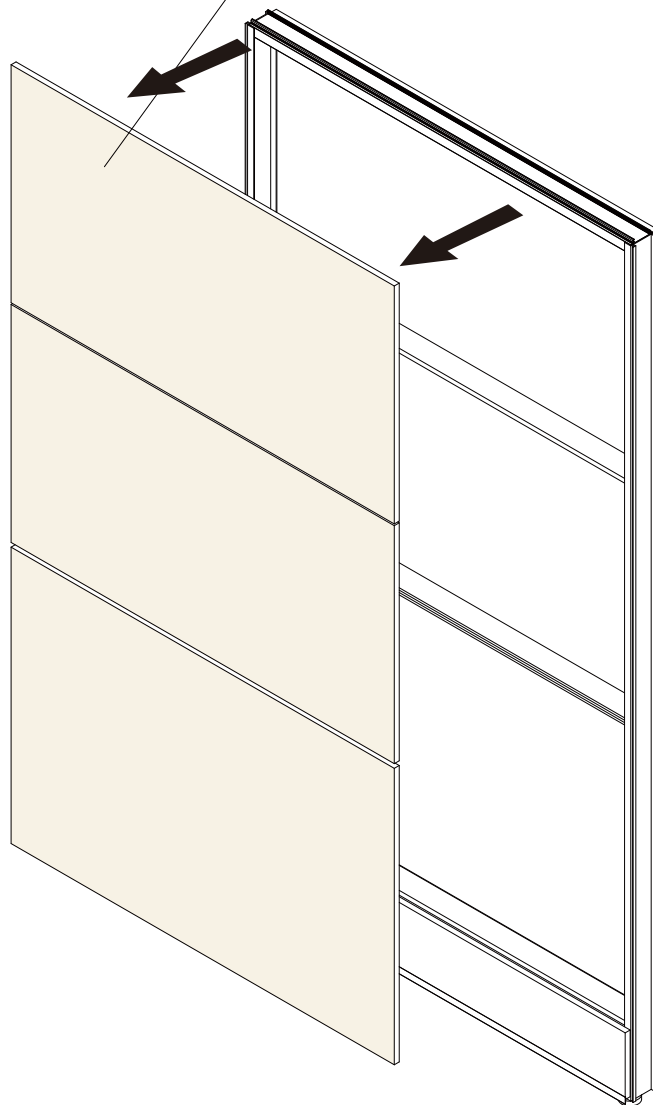


INSTALLATION STEPS

2

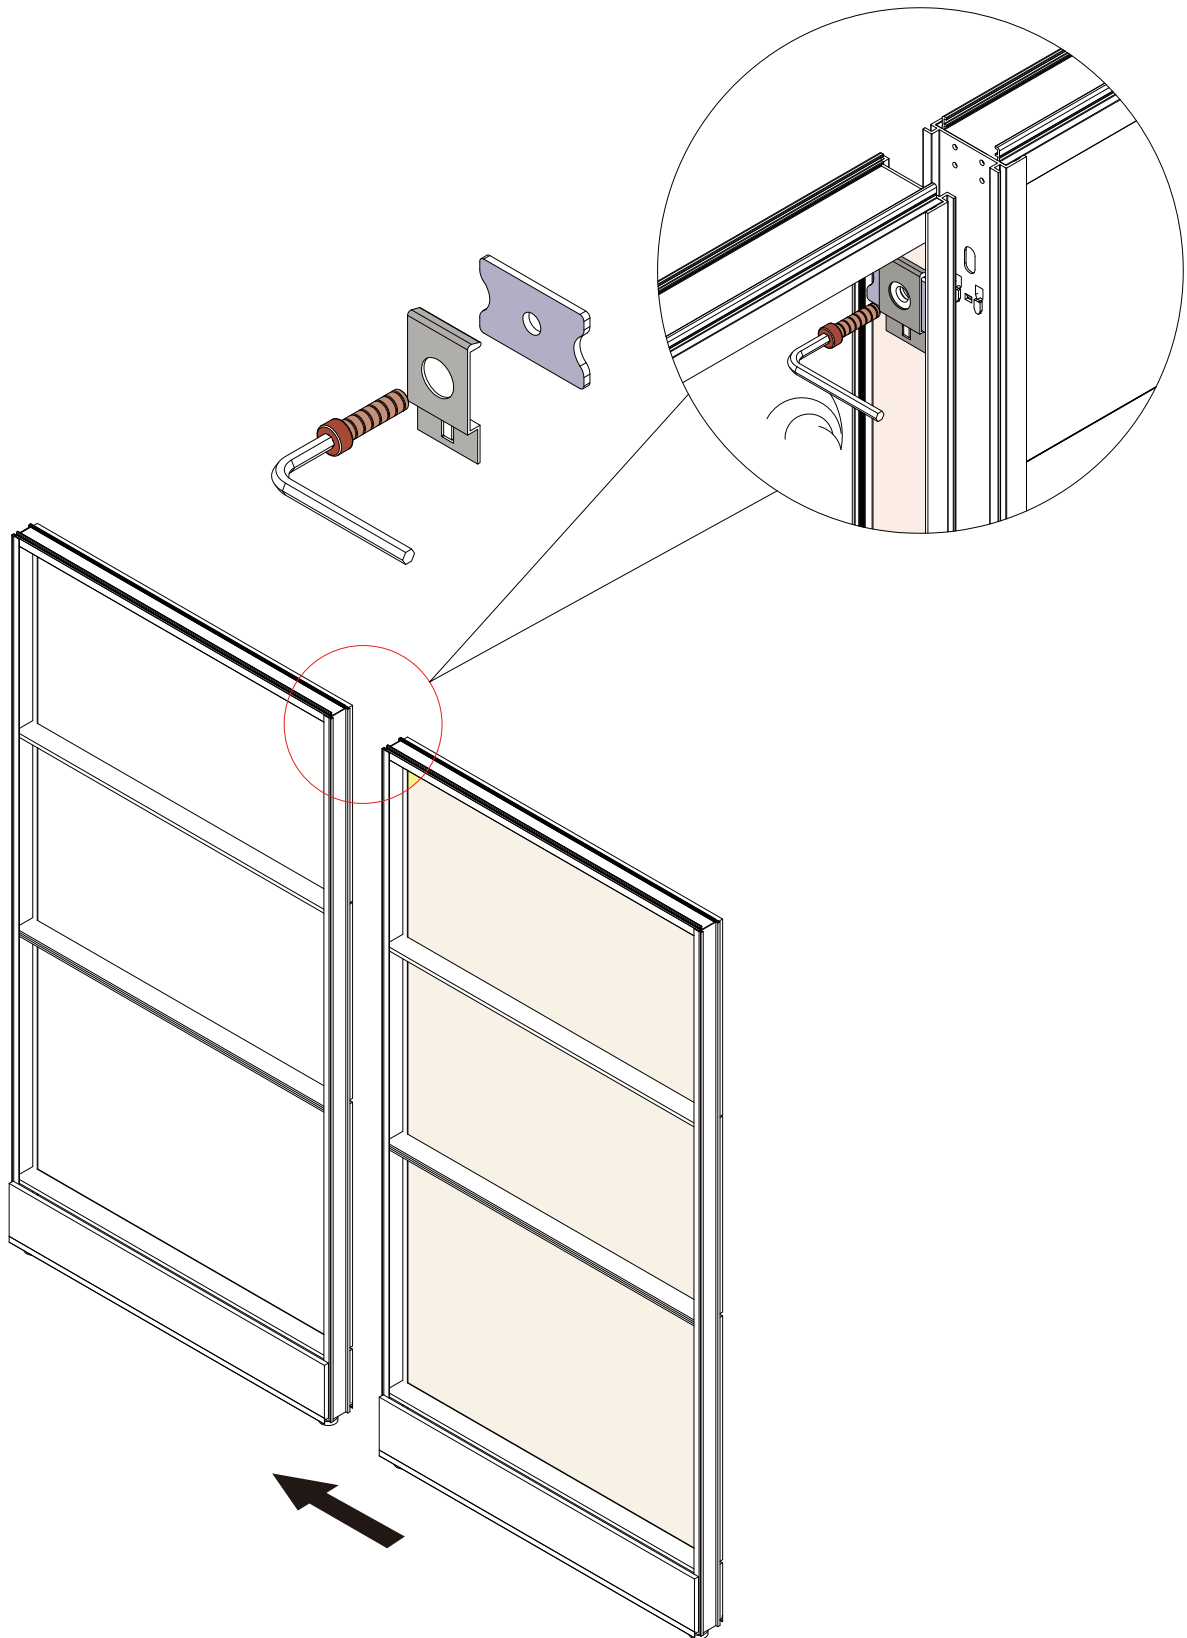



INSTALLATION STEPS

3

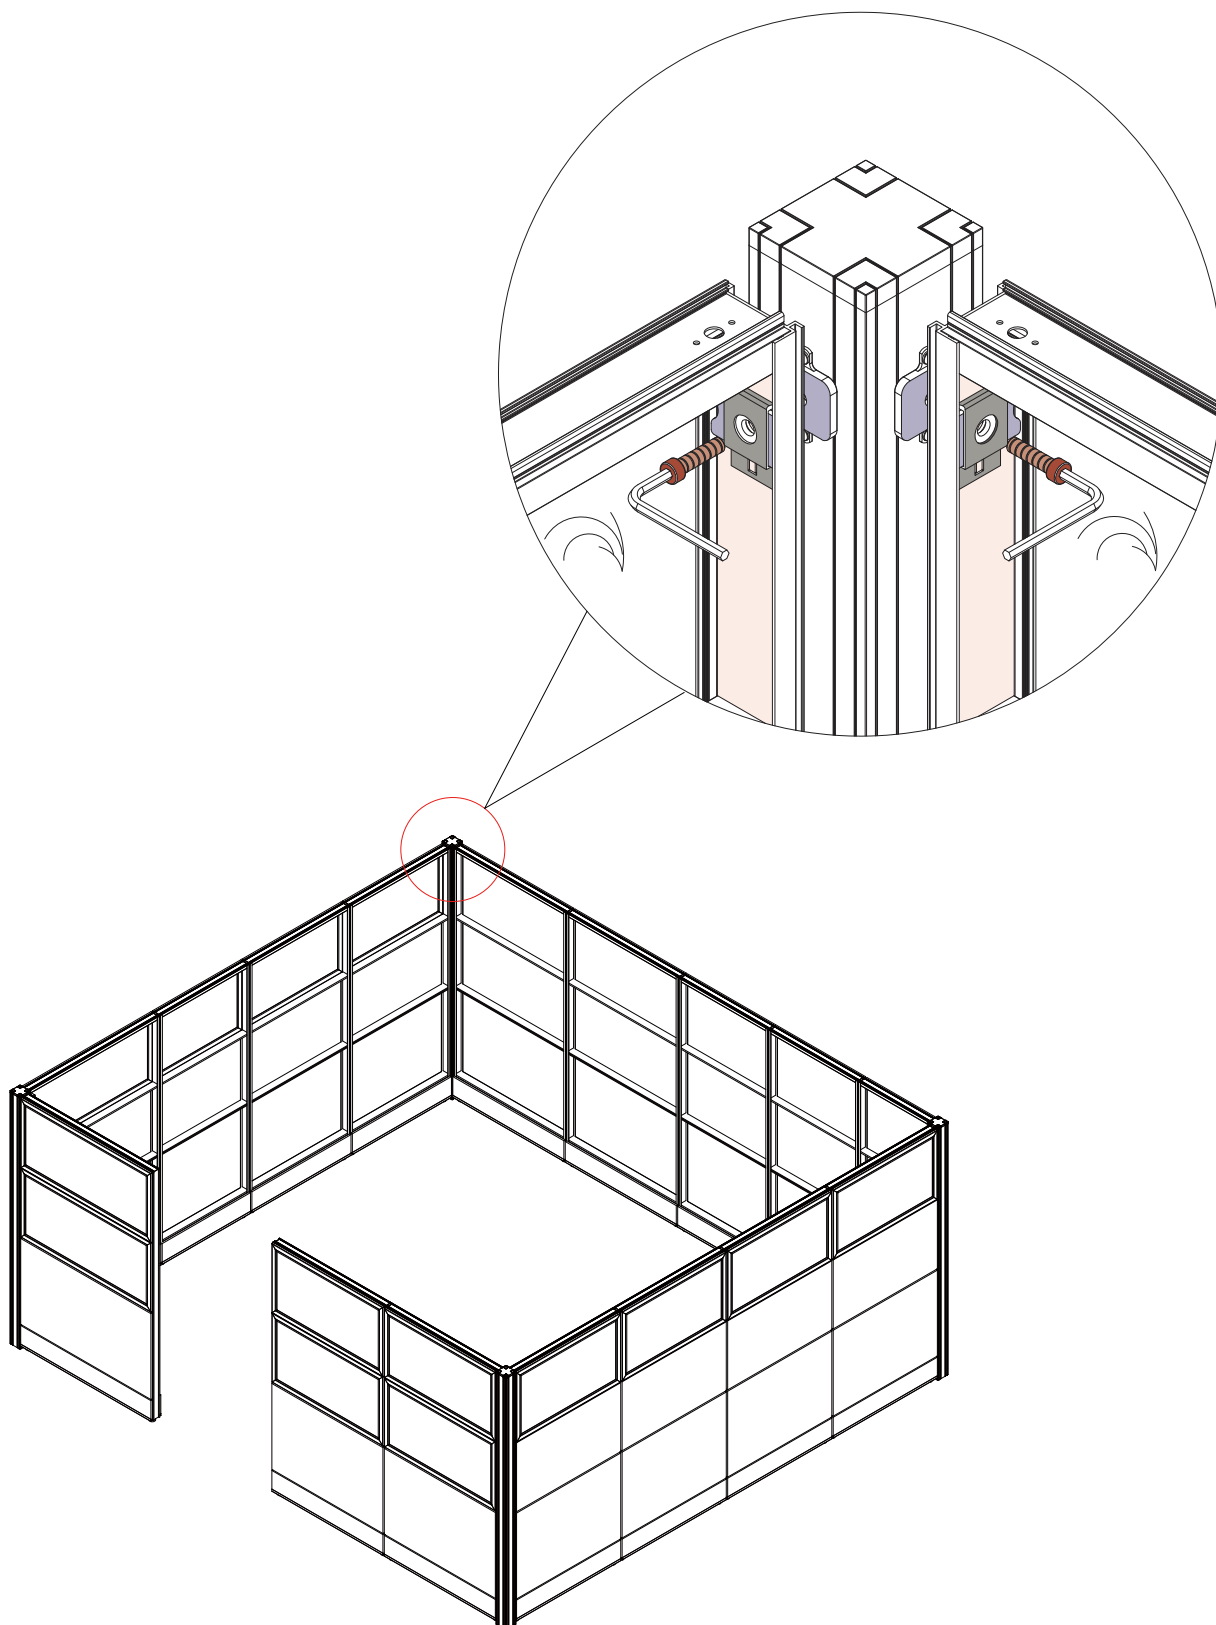

INSTALLATION STEPS


4

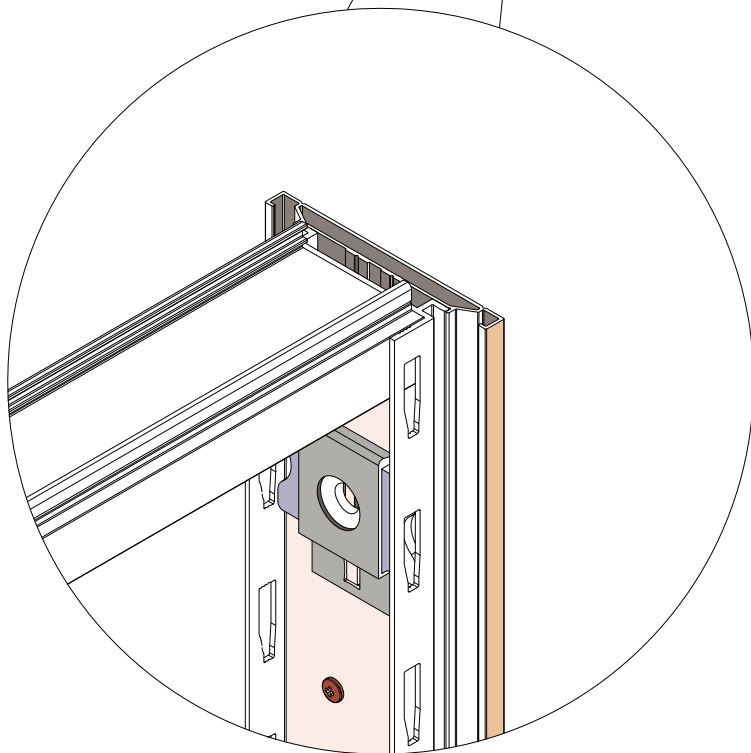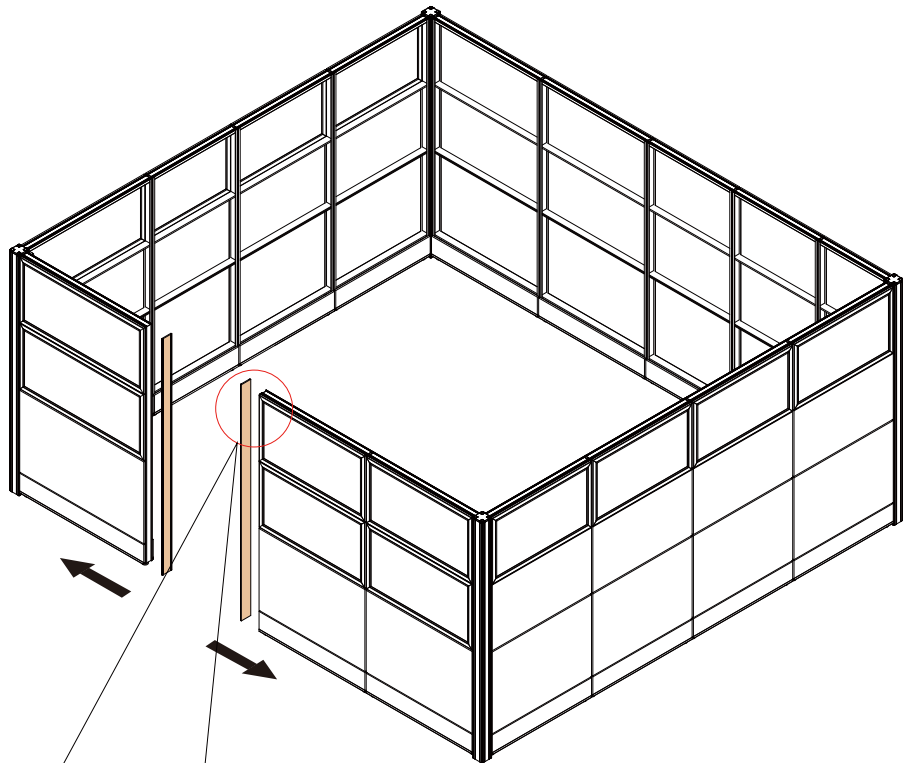

INSTALLATION STEPS


5

Note: Before hanging the decorative panel, first pass the connecting wire of the LED lamp through the decorative panel.

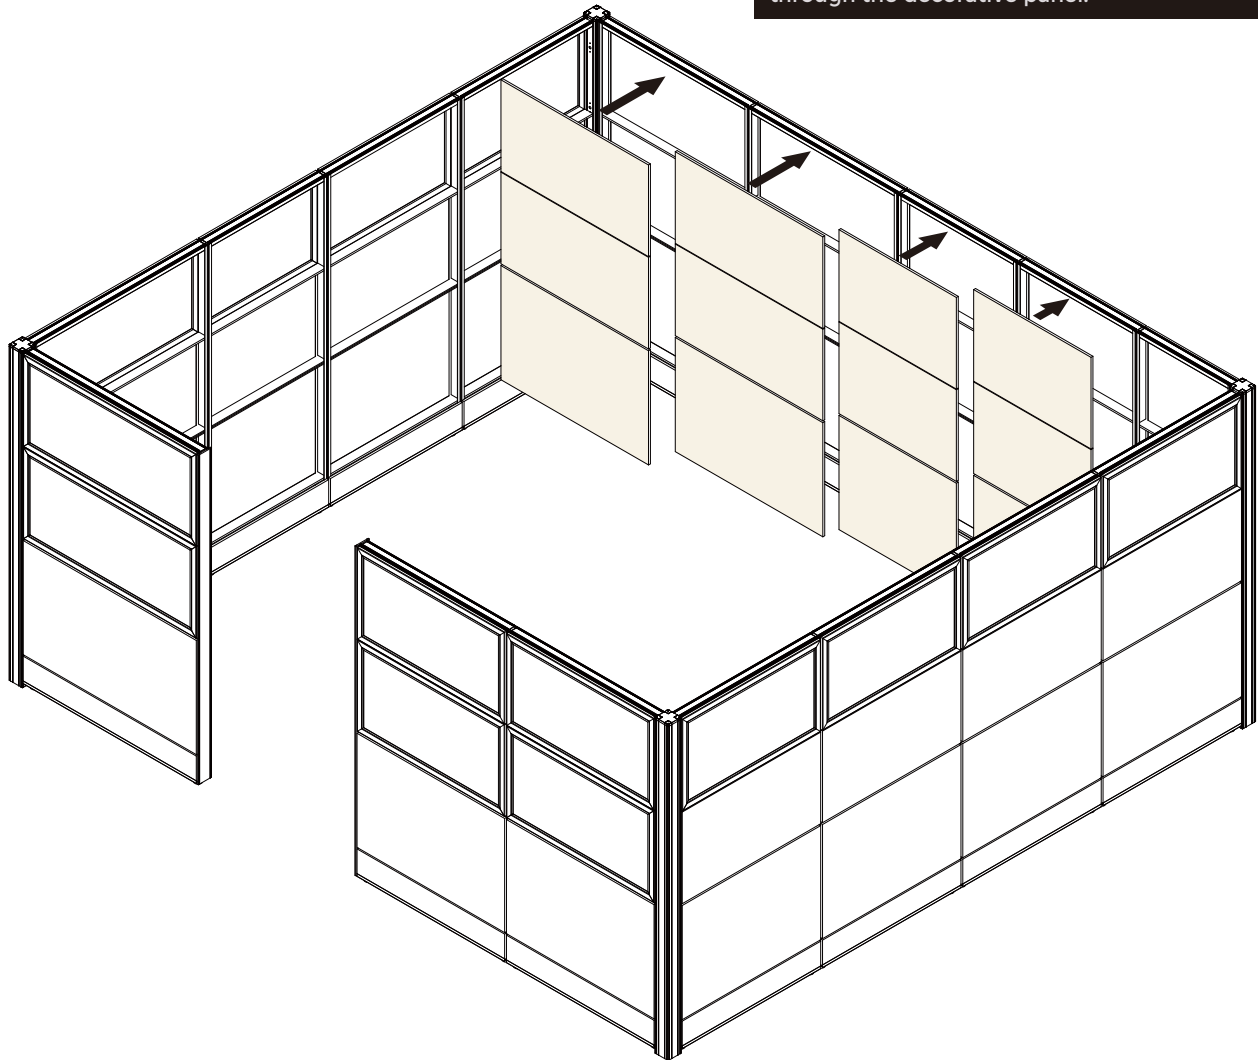





INSTALLATION STEPS

6

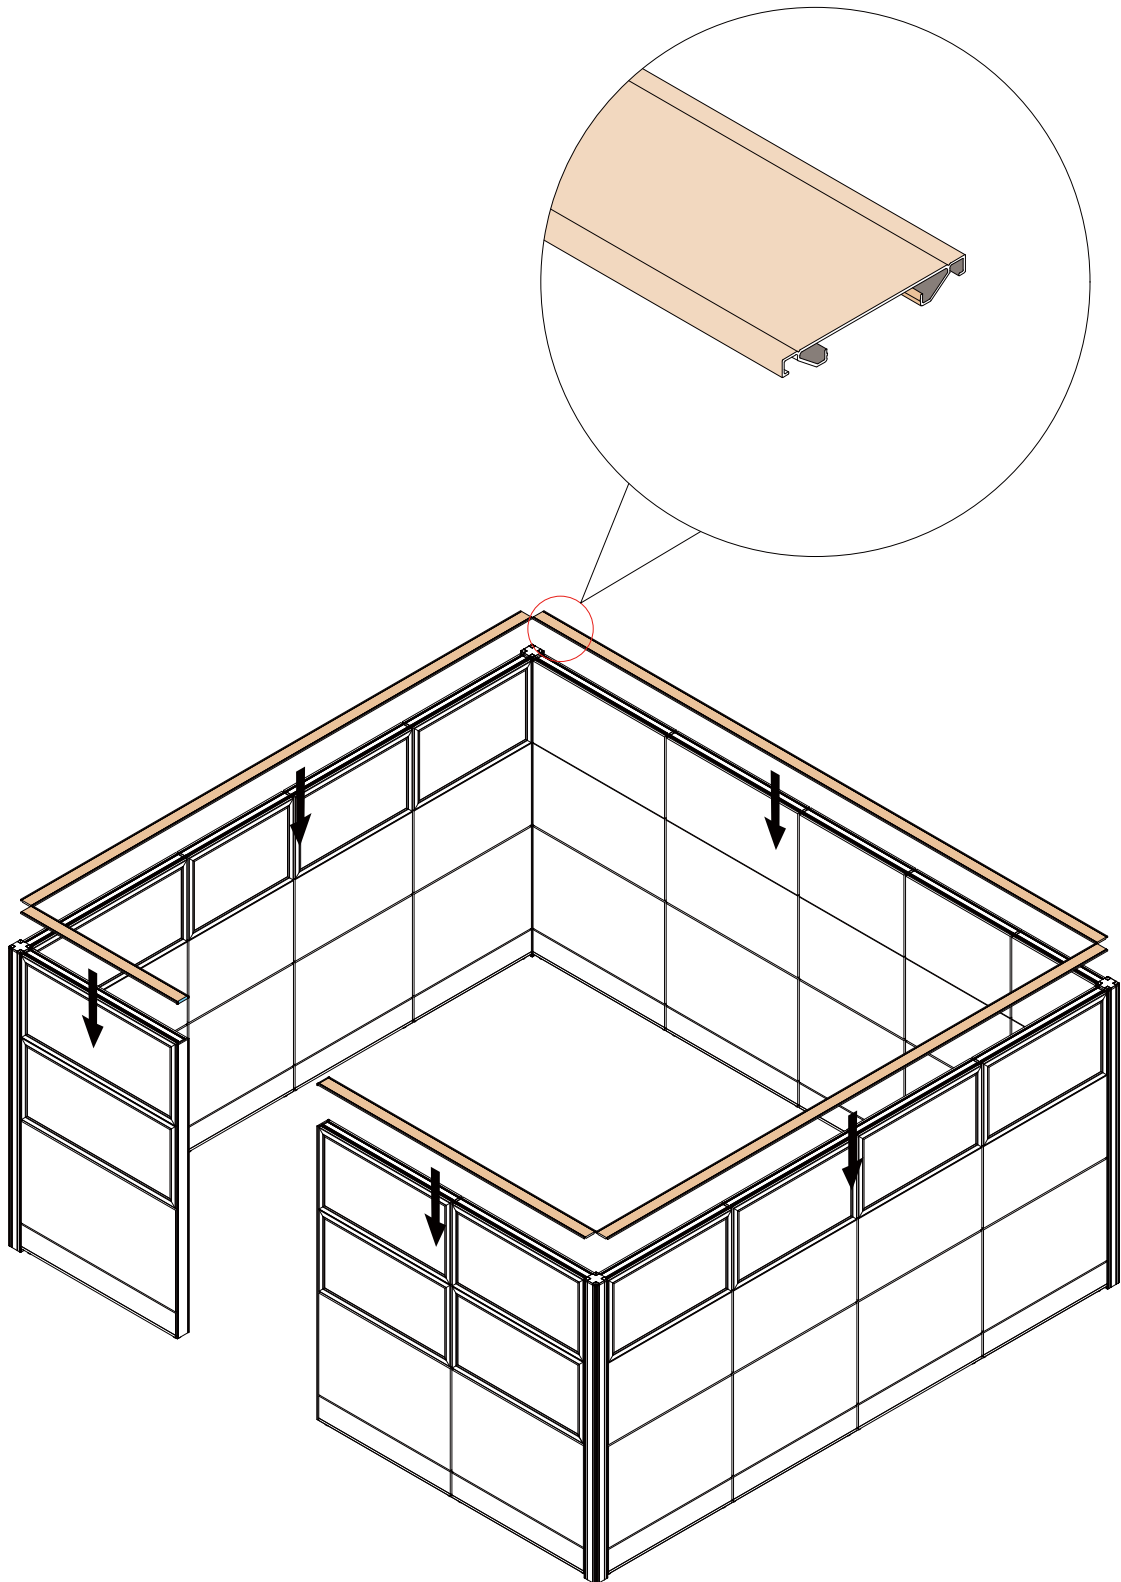




INSTALLATION STEPS

7

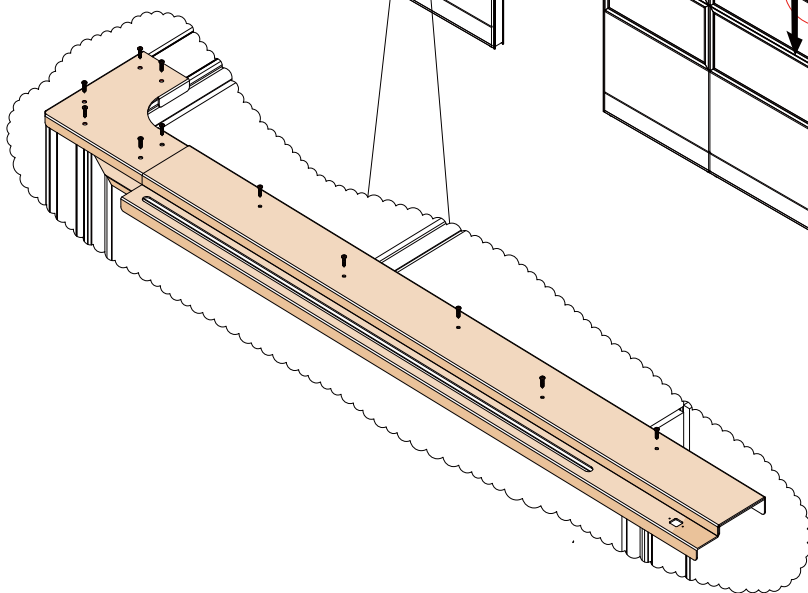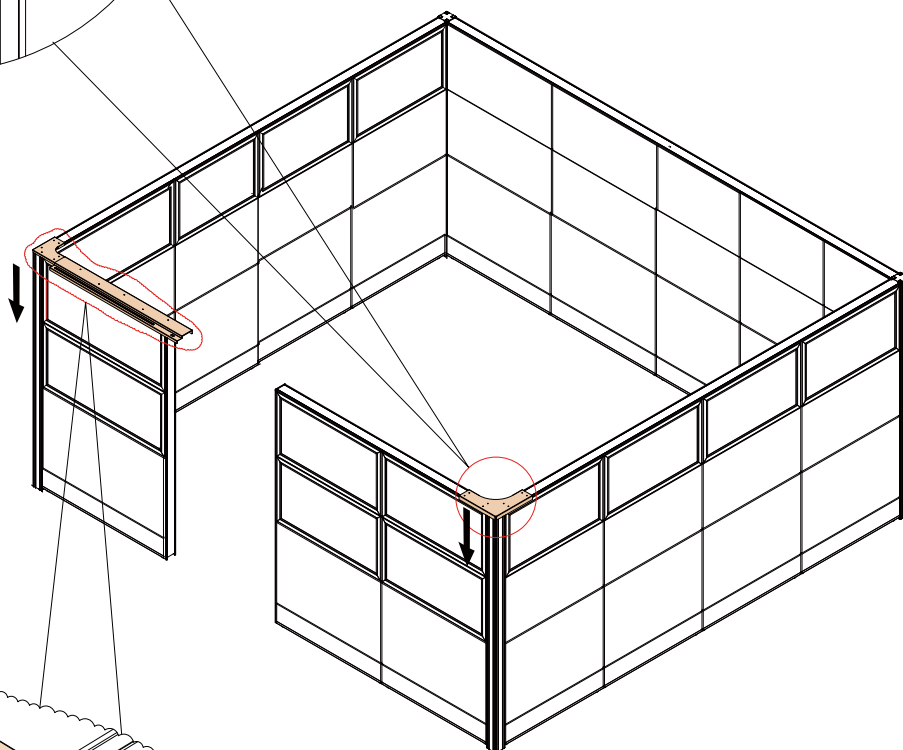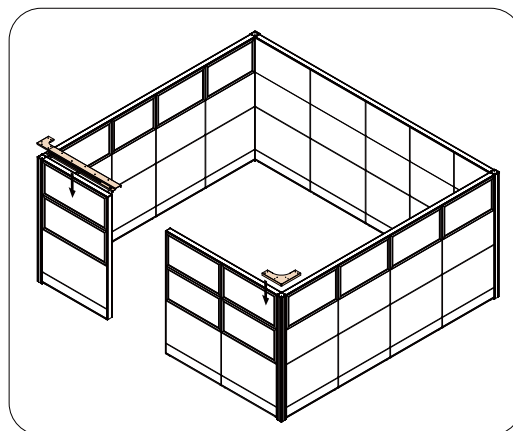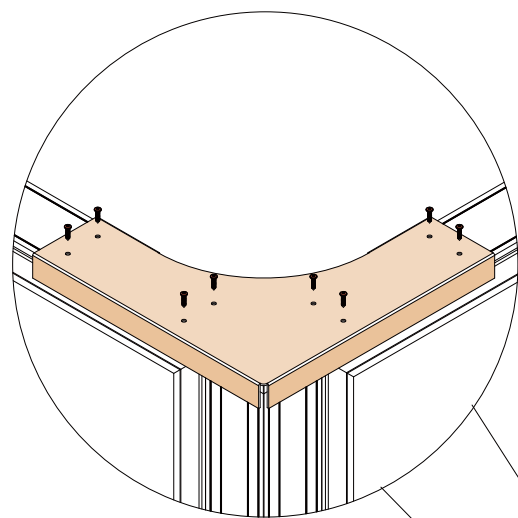


INSTALLATION STEPS

8

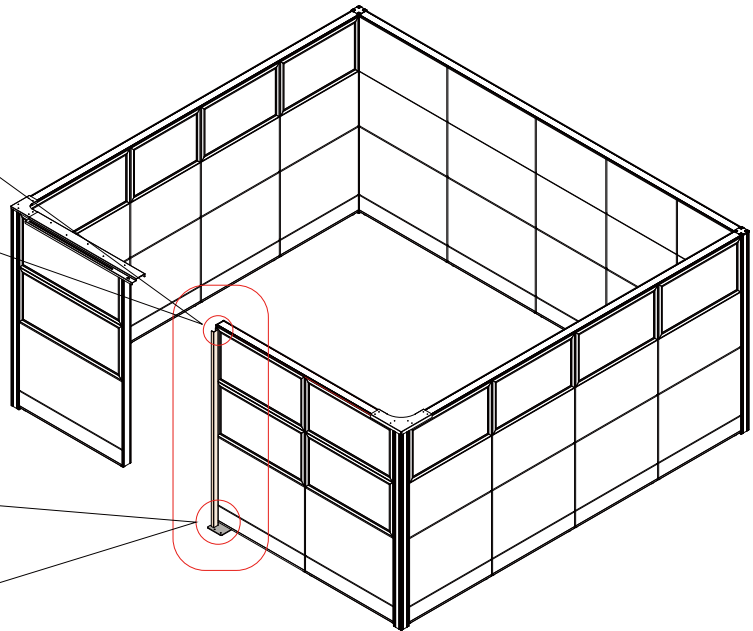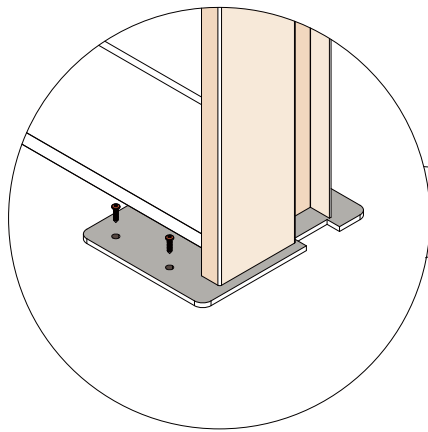
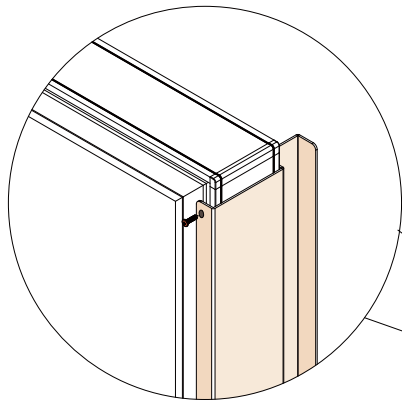


[Note: Double-sided tape is pre-pasted inside]

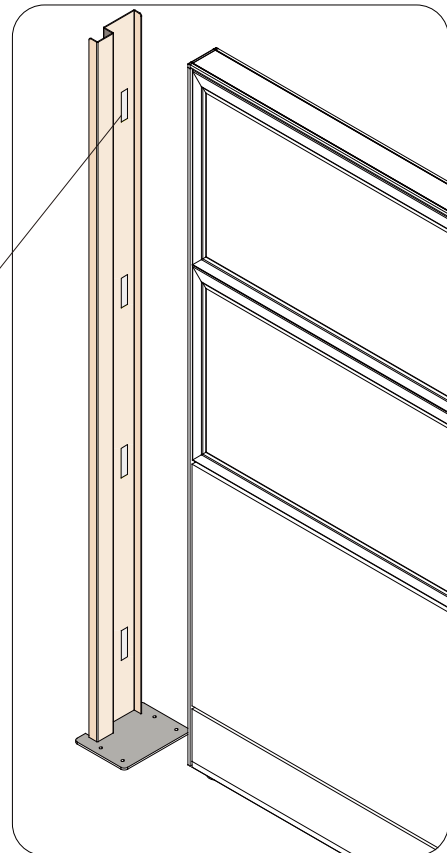


INSTALLATION STEPS

9

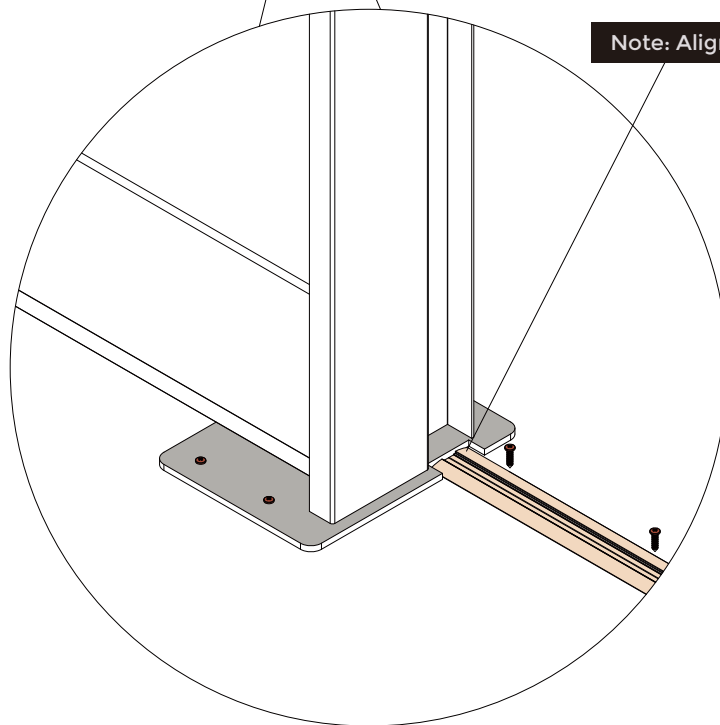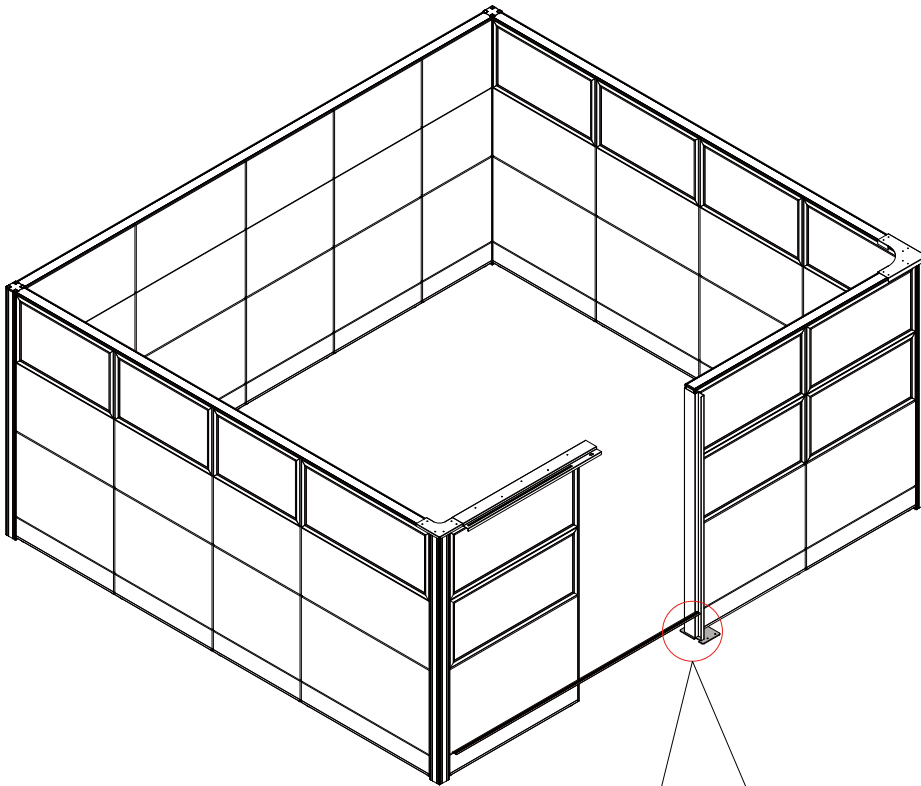



INSTALLATION STEPS

10

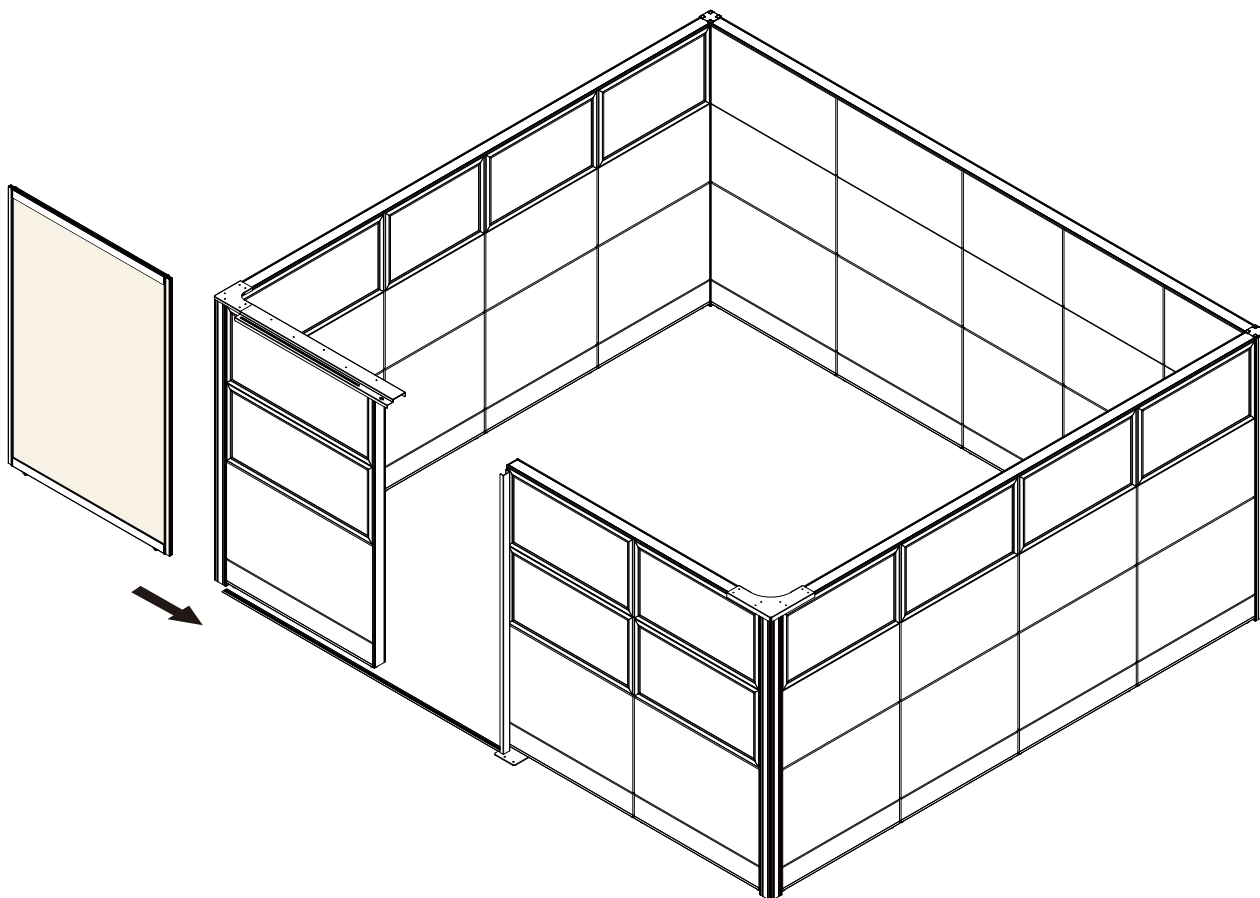


INSTALLATION STEPS

11

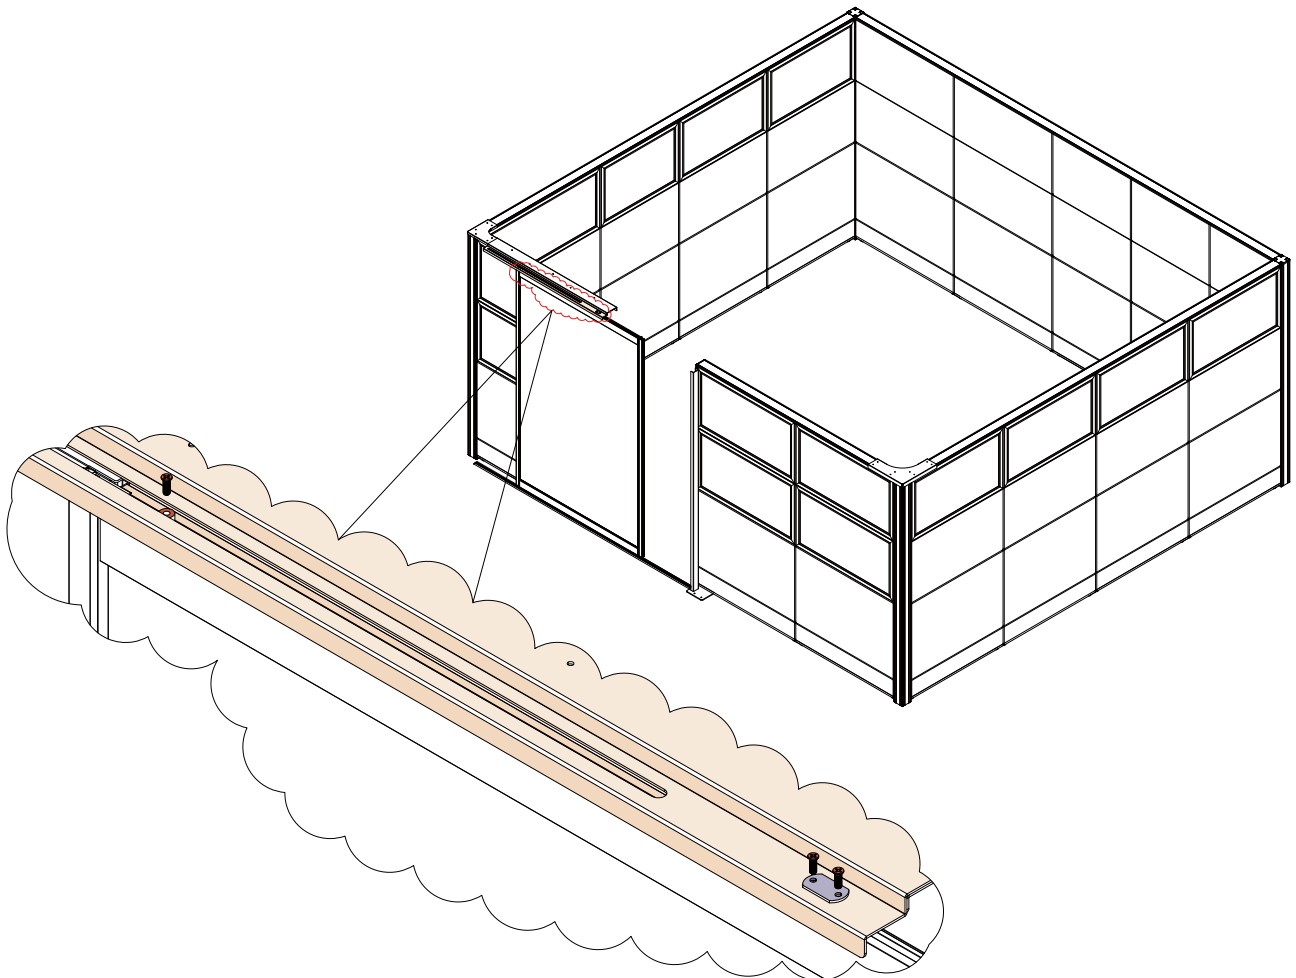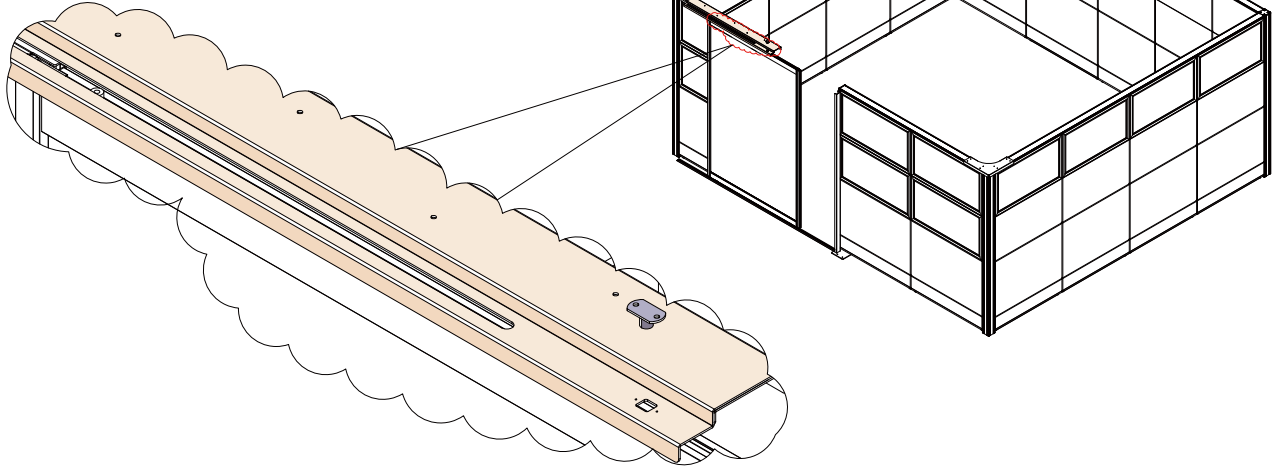



INSTALLATION STEPS

12

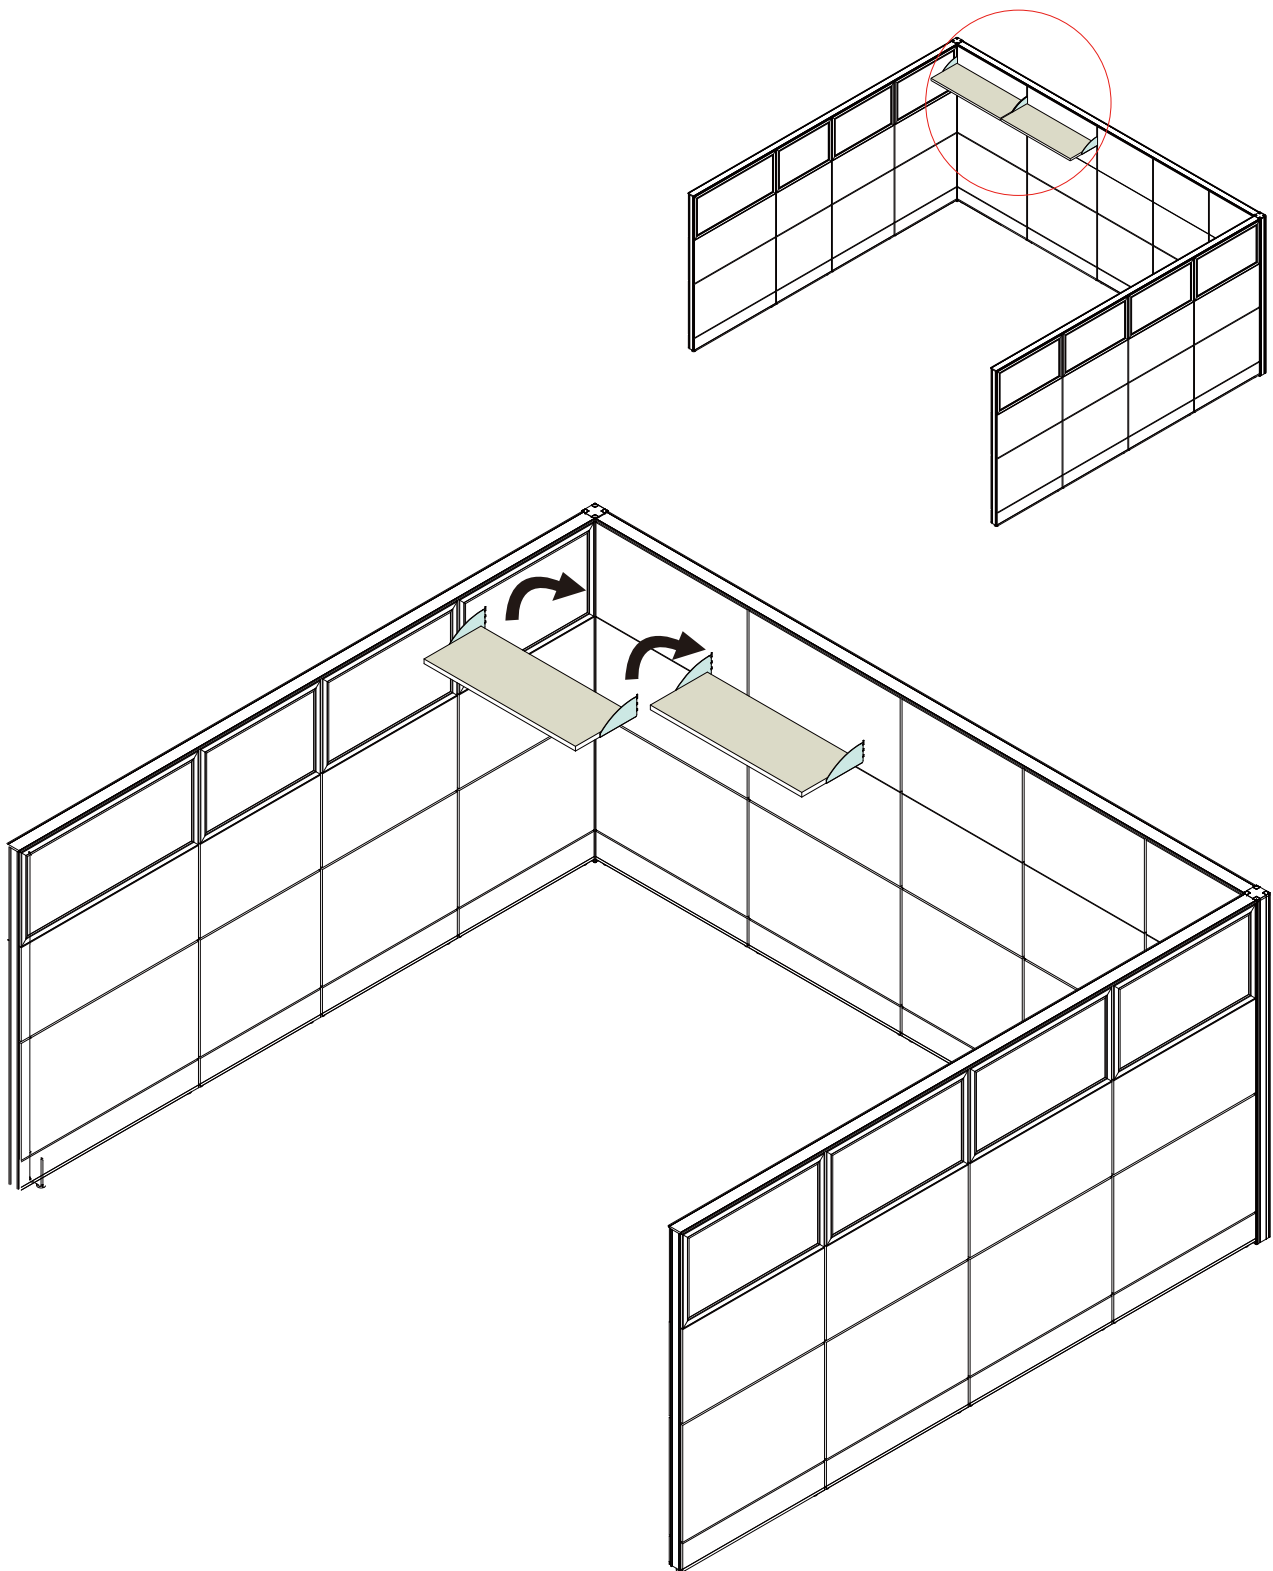

INSTALLATION STEPS

13

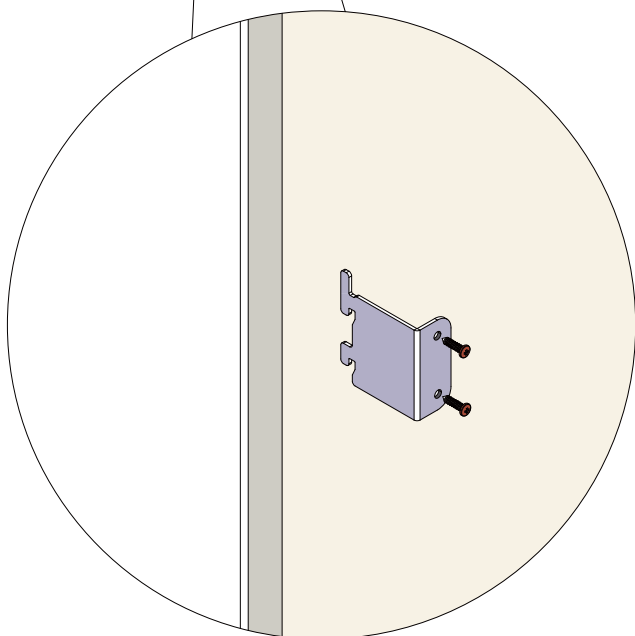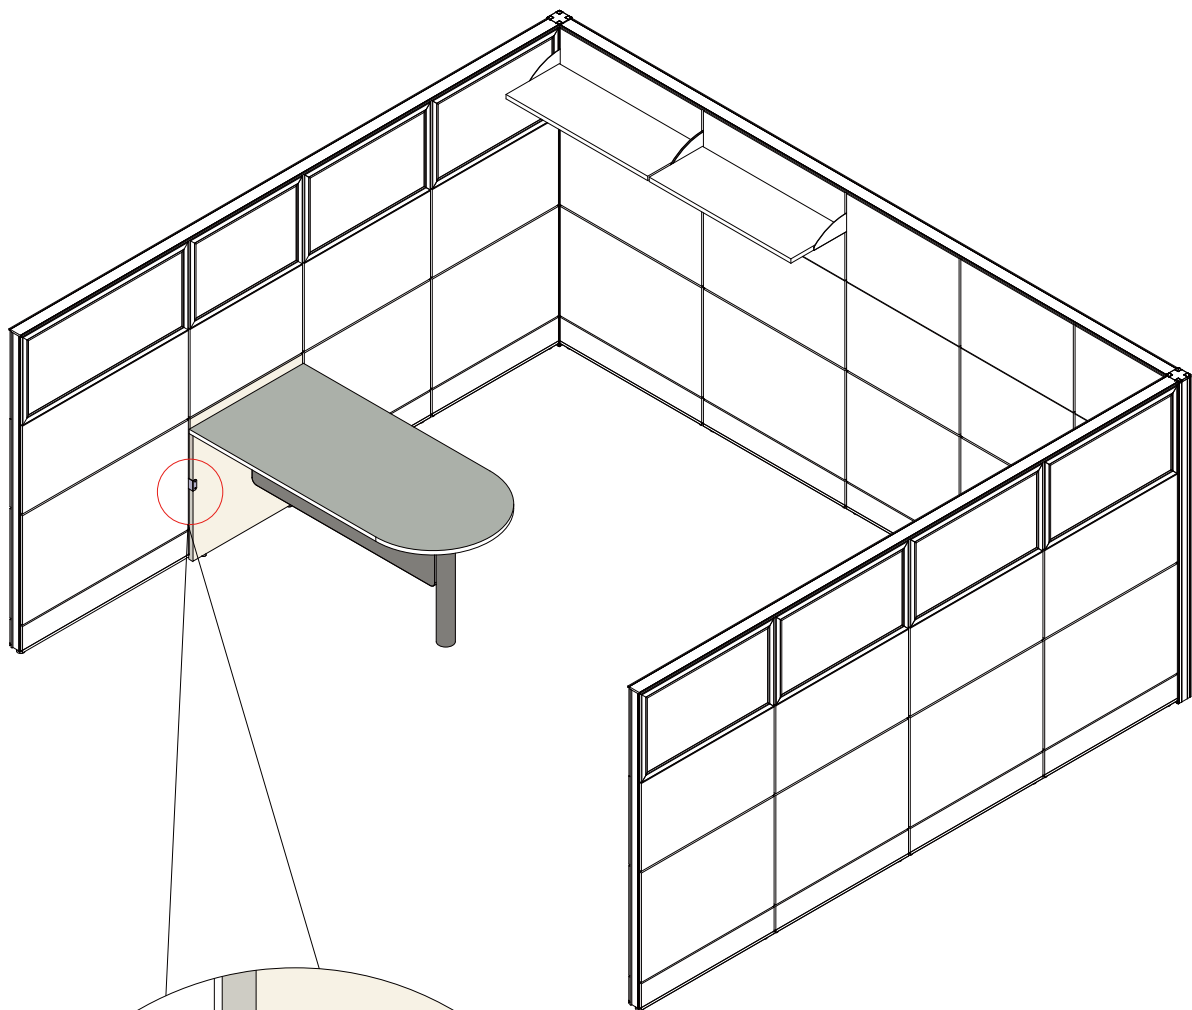

14

