


Q1A

Q1A Series Assembly Instruction


PARTS SHOW

A

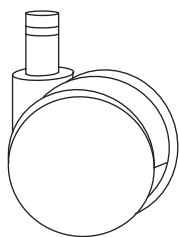


Casters x 5

B




Five-star tripod x 1

C




Aerobar x 1

D

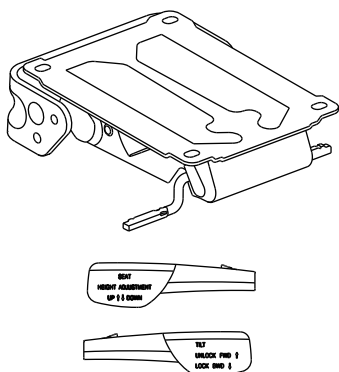


Chassis x 1

E

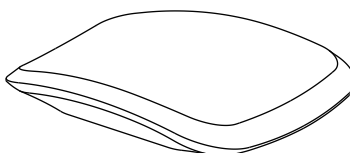


Cushion x 1

F

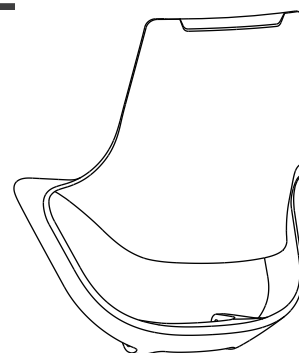


Backrest x 1

G

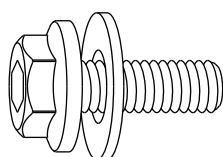

M6*16 x 4

H



M10*31 x 4


I




M5 x 1

INSTALLATION STEPS


STEP 1

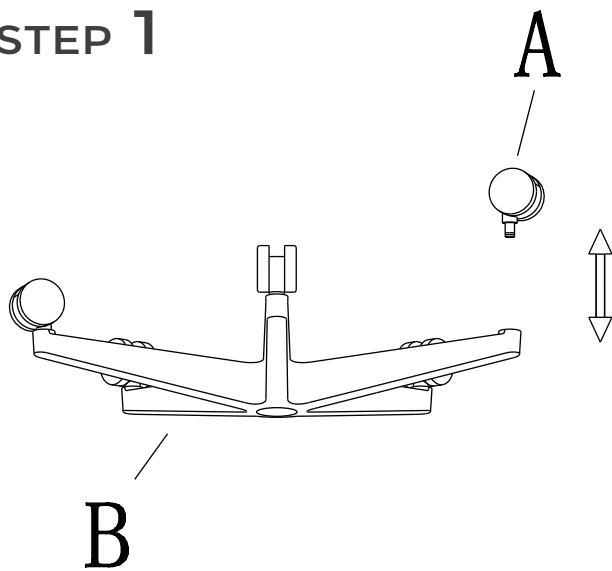


STEP 2

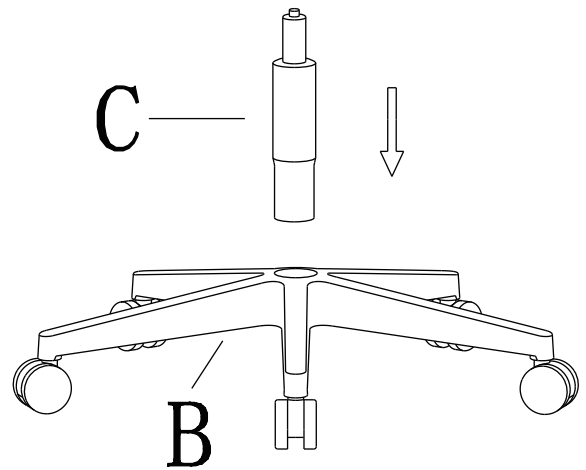


STEP 3

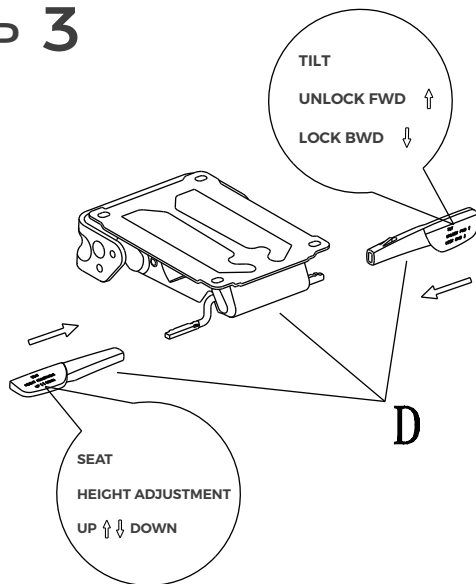


STEP 4

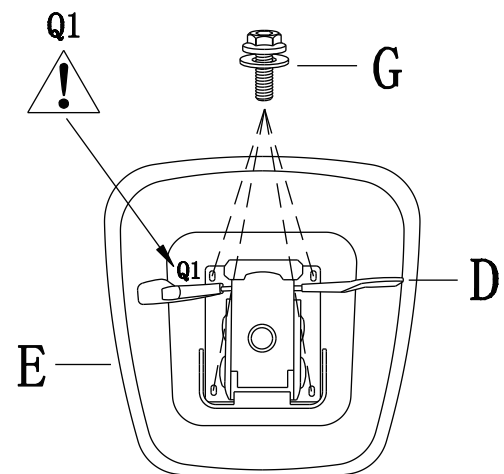

STEP 5

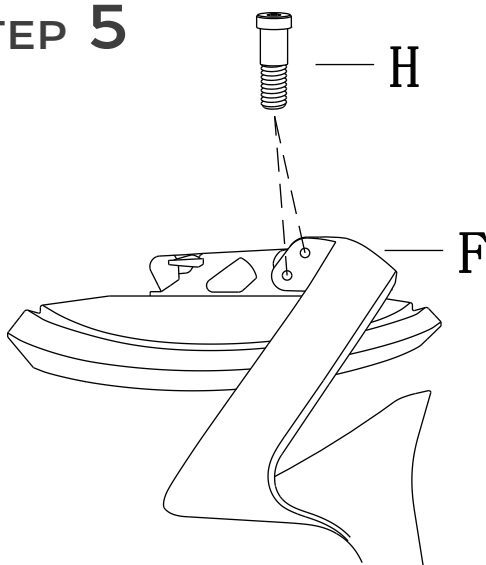

STEP 6

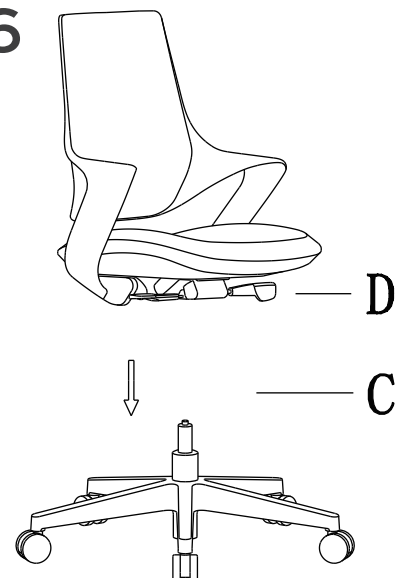


Q1-HA

Q1-HA Series Assembly Instruction


PARTS SHOW

A

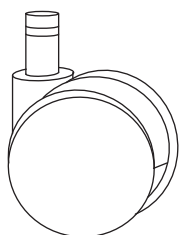

Casters x 5

B




Five-star tripod x 1

C




Aerobar x 1

D

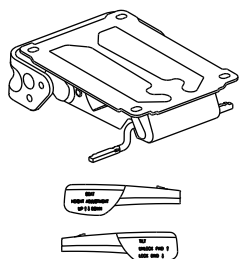


Chassis x 1

E

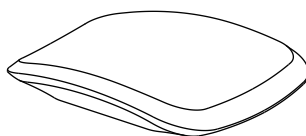


Cushion x 1

F

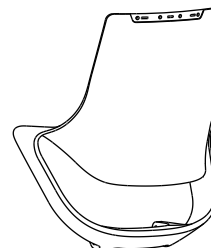

Backrest x 1

G

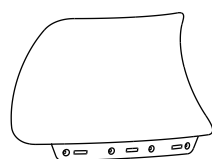


Headrest x 1

H




silver plastic decorative
cover x 1

I

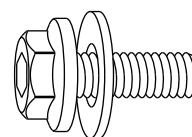


M6*16 x 4

J




M10*31 x 4

K



4*16 x 4


L

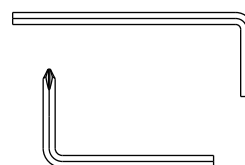


Each 1

INSTALLATION STEPS


STEP 1

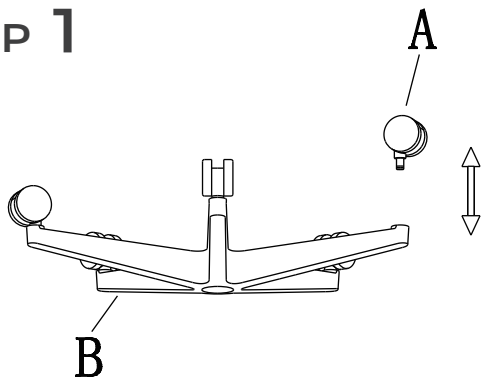


STEP 2

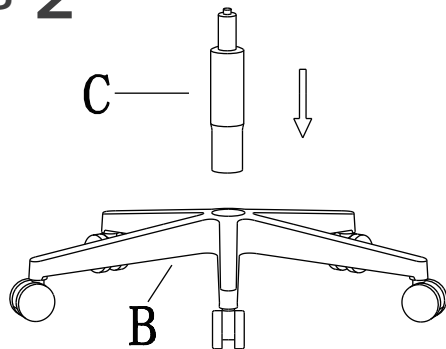


STEP 3

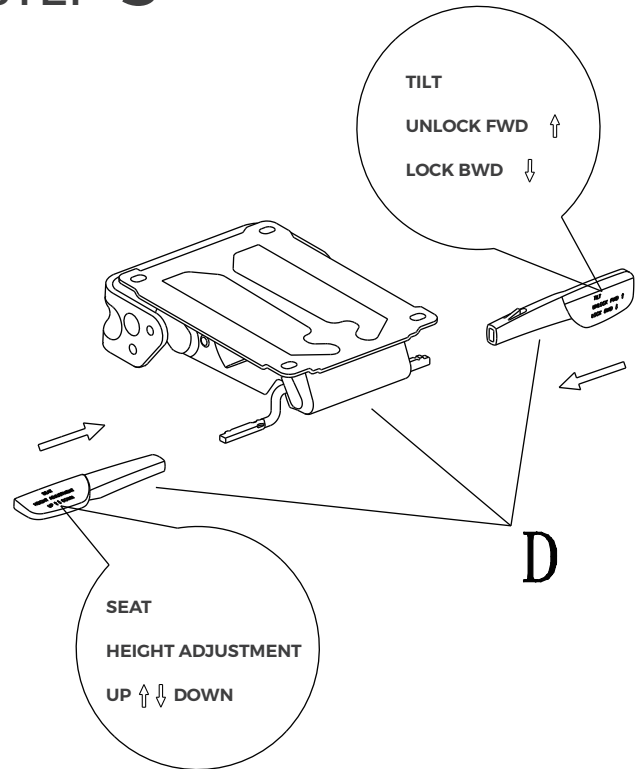


STEP 4

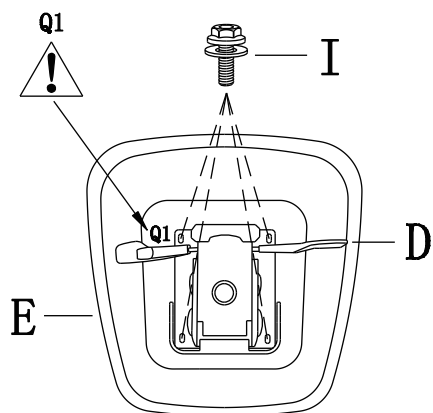


STEP 5

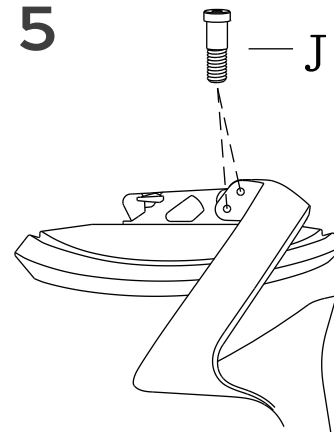

STEP 6

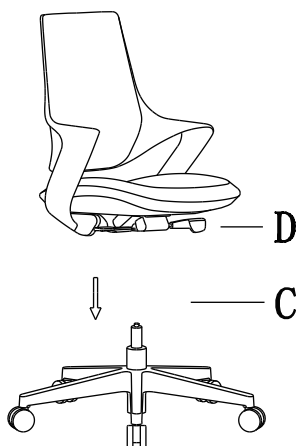

STEP 7

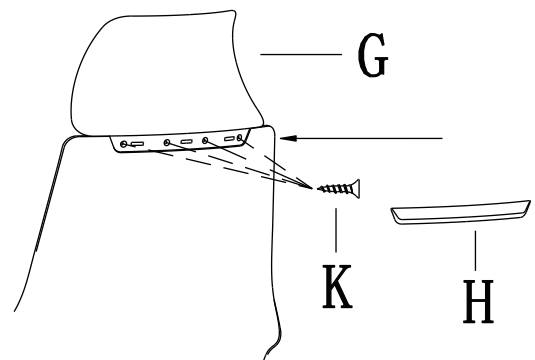


Q1-V

Q1-V Series Assembly Instruction


PARTS SHOW

A

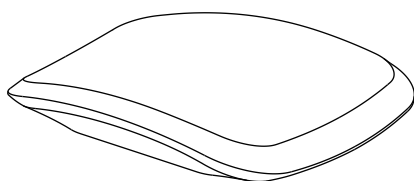


Cushion x 1

B

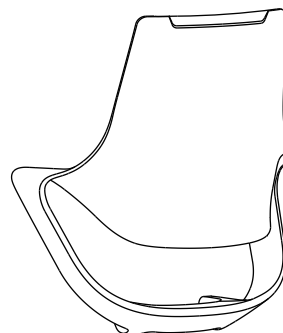


Backrest x 1

C

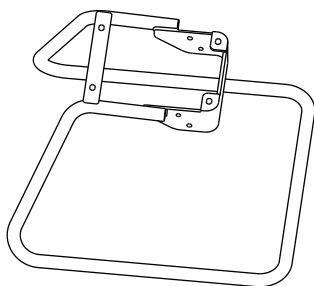


Support tripod x 1

D

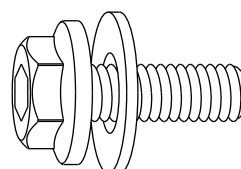

M6*16MM x 4

E

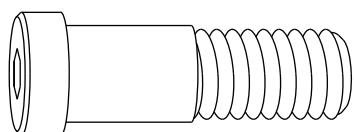

M10*31MM x 4


F




M5 x 1

INSTALLATION STEPS

STEP 1

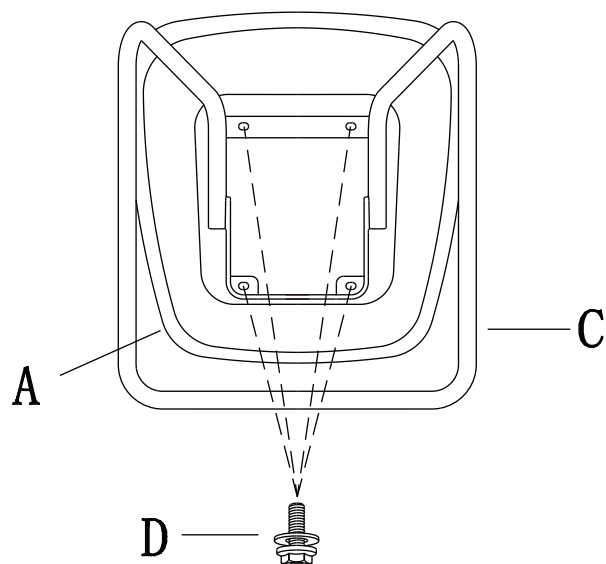

STEP 2

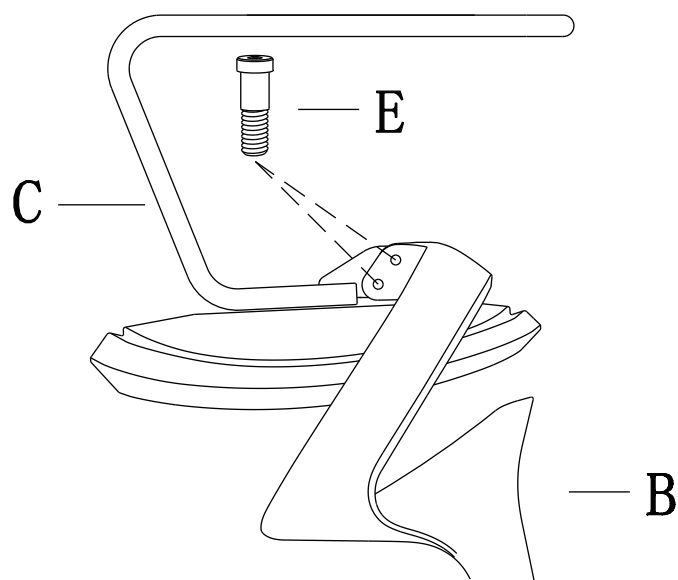

STEP 3

